


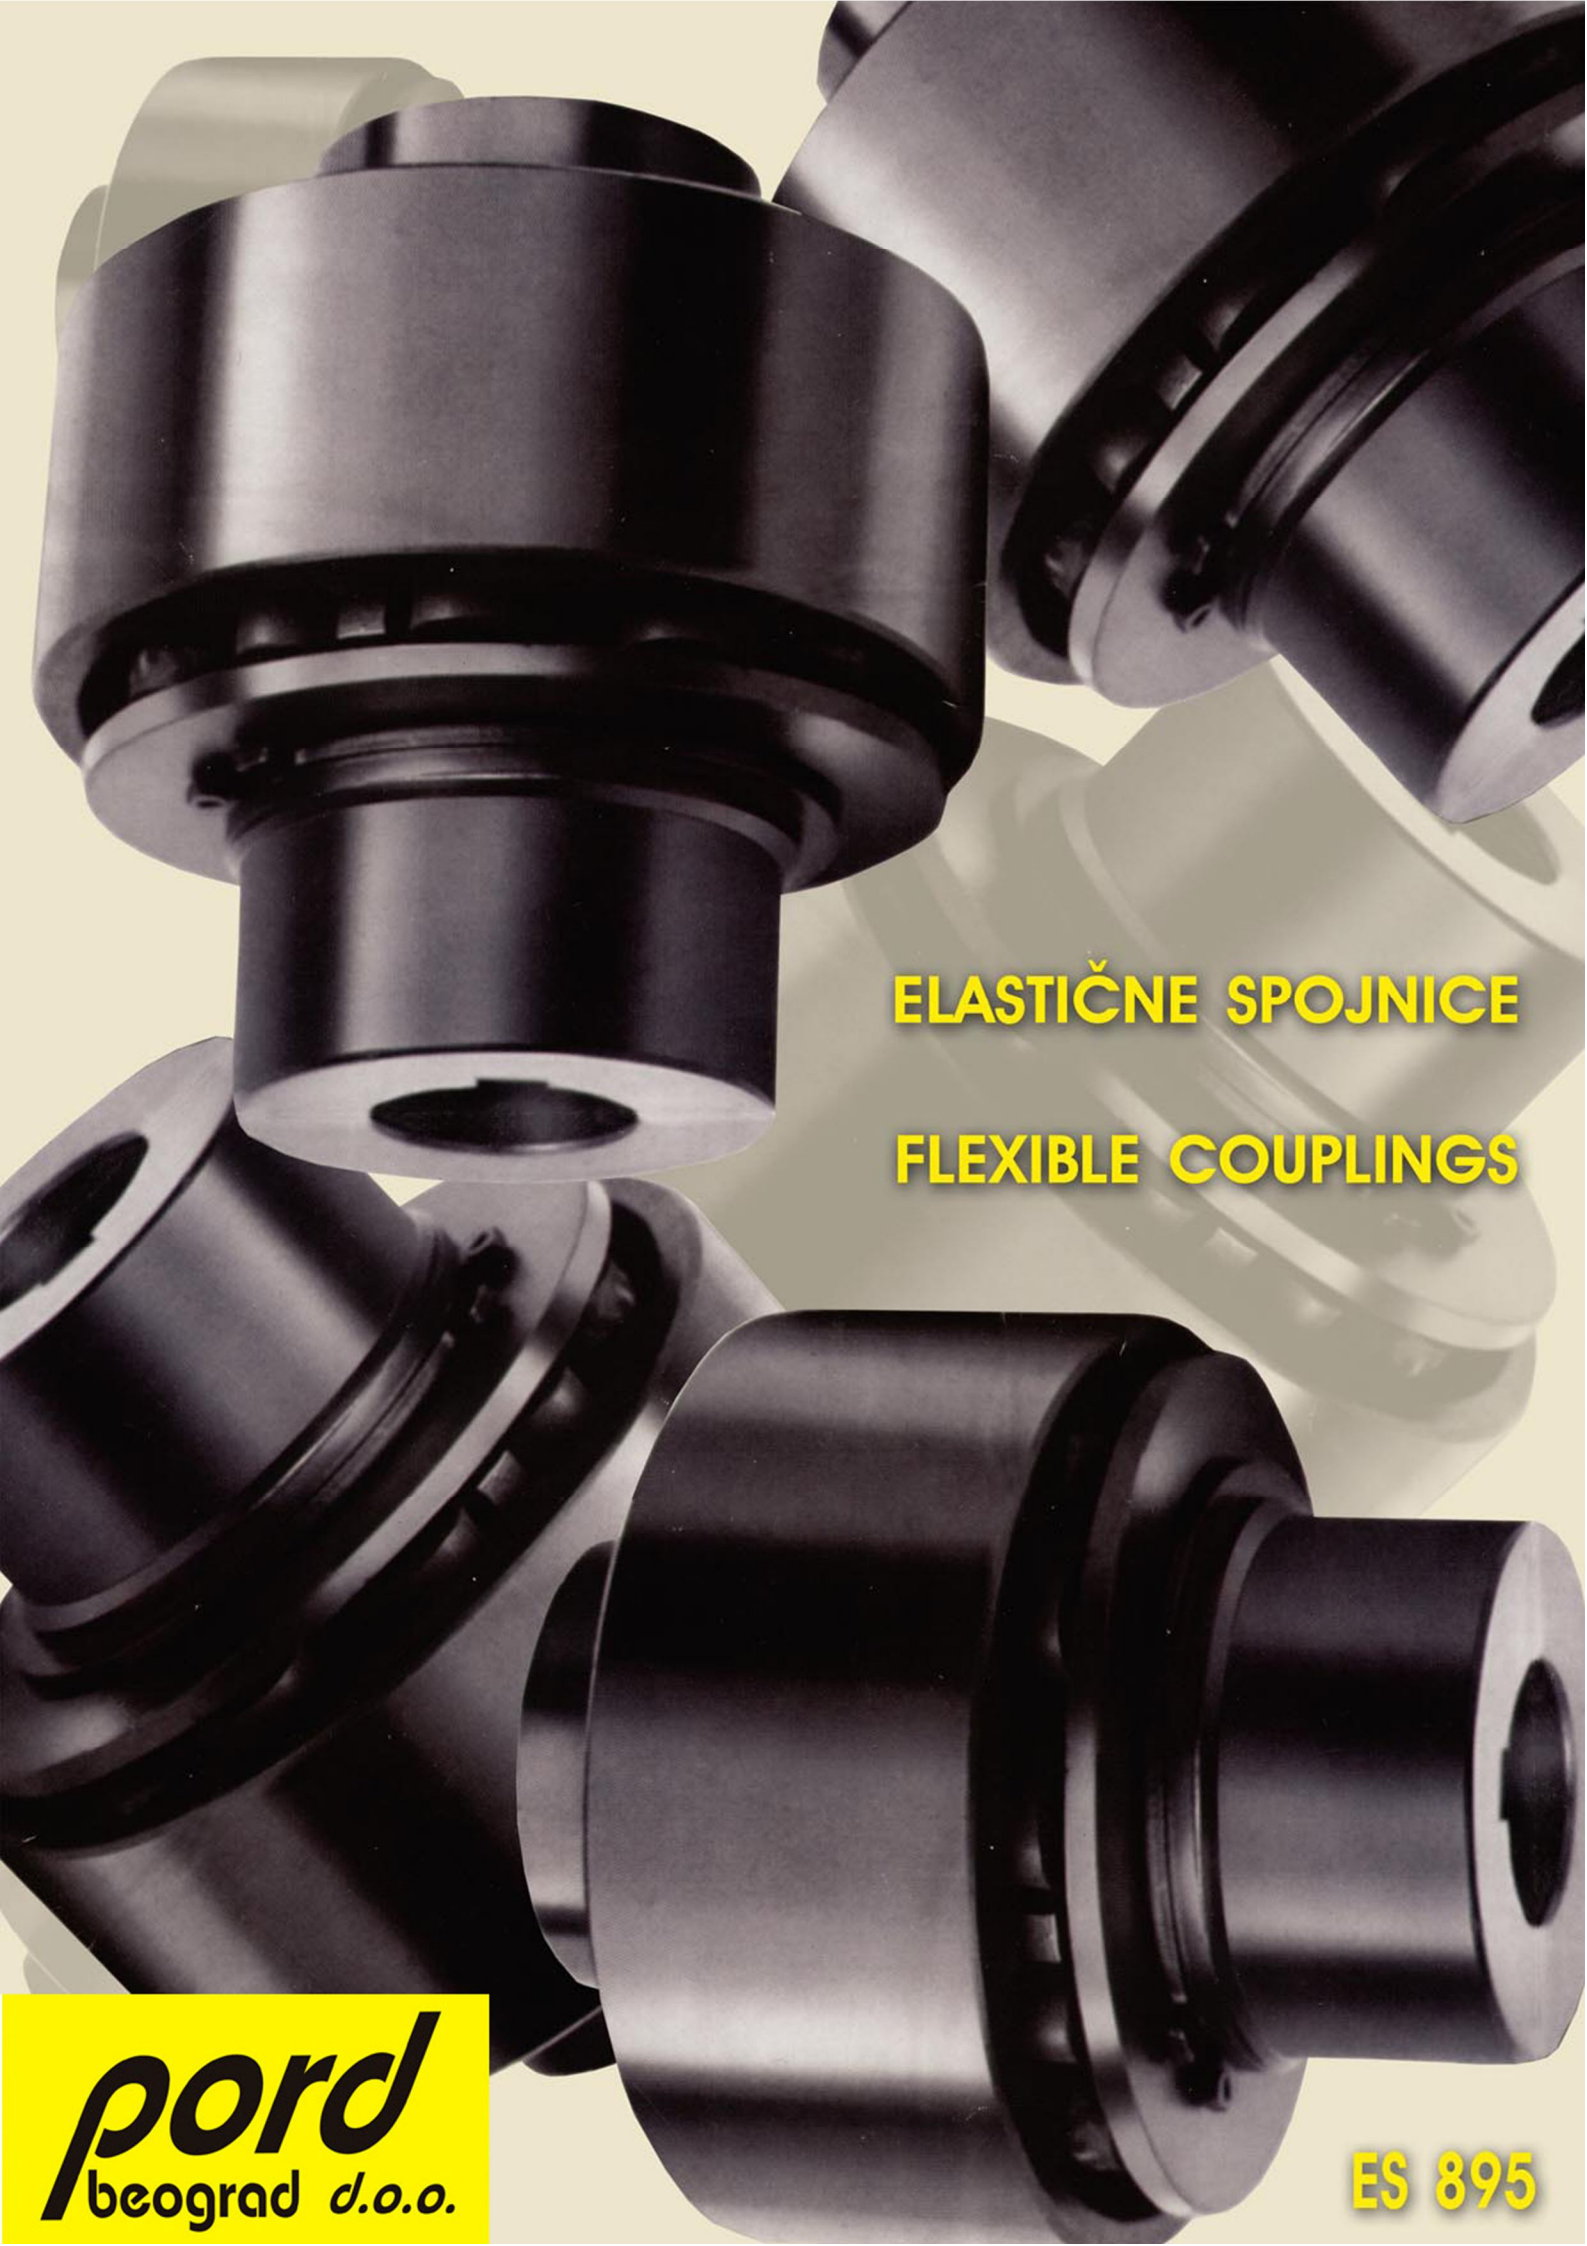

ELASTIČNE SPOJNICE



FLEXIBLE COUPLINGS

pord
beograd d.o.o.


ES 895

ELASTIČNE SPOJNICE

FLEXIBLE COUPLINGS

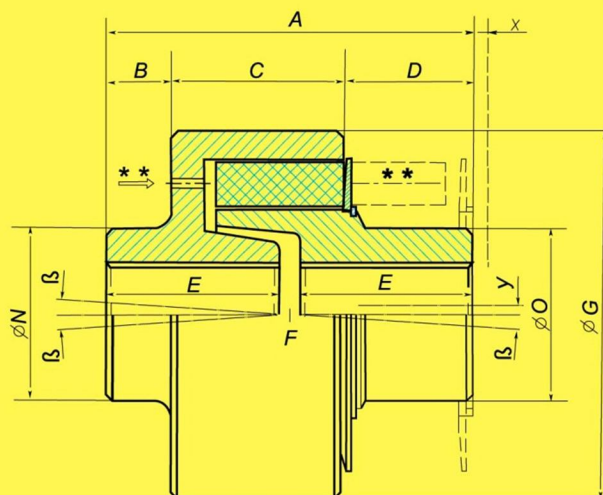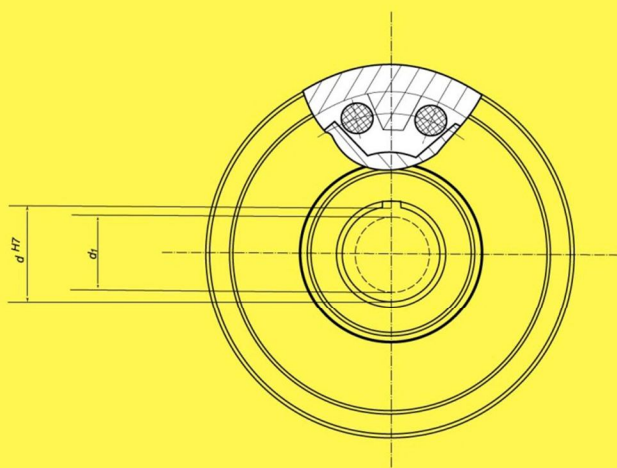

Tip Typ	nomi- nal	inter- val	Mt maks. Nm	$J = \frac{GD^2}{4}$ kg m ²	Dozvoljeni broj okretaja Limited revolutions (1/min)	Težina Weight (kg)	A	B	C	D	E	F	ØG	ØN	ØO	d^{H7} minimum	d^{H7} maximum	d1 Predbuš. Forbored
ES1	150	220		0,0013	2800*	2,1	85	15	40	30	40	5	85	40	40	10	24	8+0,5
ES2	300	450		0,0045	2000*	4,2	125	30	55	40	60	5	110	52	58	12	34	10+0,5
ES3	600	900		0,015	1500*	7	155	30	65	60	75	5	140	70	80	22	48	20+0,5
ES4	900	1350		0,046	1500*	14	185	40	80	65	90	5	165	90	90	26	60	25+0,5
ES5	1500	2250		0,176	1000*	32	235	55	95	85	115	5	230	120	130	36	85	35+0,5
ES6	3000	4500		0,78	700*	81	300	80	120	100	145	10	300	165	165	52	110	50+0,5
ES7	6000	9000		1,99	500*	124	350	95	140	115	170	10	370	200	200	72	130	70+0,5
ES8	1800	27000		5,85	200*	200	570	230	205	135	280	10	470	290	290	100	180	90+1
Dozvoljene greške montaže Permissible deviations					$\beta = 2$ $x = 0,01 \cdot A$ $y = 0,005 \cdot G$											utori za klinove po key ways after JUS M. C2. 060 DIN 6885		

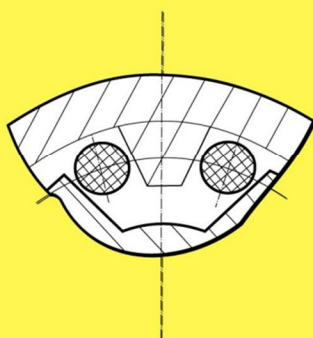

u mirovanju
in stand still

Princip rada sklopke
Principle of operating



u pogonu
in drive

NAPOMENA REMARK

- *Važi za dinamički balansirane spojnice, za nebalansirane spojnice
- *Valid for dynamic balanced couplings, for unbalanced couplings
- **Elastične uloške zameniti ovako, kako je crtkano nacrtano
- **The way how to change elastic bolts

$n_{max} = 100 \text{ min}^{-1}$
 $n_{max} = 100 \text{ rpm}$

Proizvedeno po odobrenju Strojna Nova Maribor

pord
beograd d.o.o.

"P O R D" doo, Mišarska 8, 11000 BEOGRAD, Republika SRBIJA
tel: +381 11 3242-530; 3241-248; 3245-173; 3238-176; 3245-671
fax: +381 11 3244-961 mail: office@pord.rs www.pord.rs